

Selection table

Version	Description	Overload scale	Measuring range	Ordering code	Weight (kg)
Ammeter BB8050-A(□-□) 	Direct measuring	-	0~20/40 mA	40121	0.20
			4~20/40 mA	40122	
	Direct measuring	-	0~1 A	40123	
			0~5 A	40124	
	For CT (current transformer)	2 times or 5 times	sec. 1 A	40125	
			sec. 5 A	40126	

Selection table

Version	Description	Measuring range	Ordering code	Weight (kg)
Voltmeter BB8050-V(□-□) 	Direct measuring	0~10 V	40127	0.20
		0~25 V	40128	
		0~40 V	40129	
		0~60 V	40130	
		0~100 V	40131	
		0~150 V	40132	
		0~250 V	40133	
		0~300 V	40134	
		0~450 V	40135	
		0~500 V	40136	
		0~600 V	40137	
	For PT (potential transformer)	sec. 100 V	40138	
		sec. 110 V	40139	
		sec. 120 V	40140	